

## **Using the Rack-it-teer**

*The finger lock bungs are designed to stabilize the entire rackit-teer unit in the barrel.*

### **To operate:**

- 1. Slide the Rack-it-teer into the bung hole, pointy end first.*
- 2. Turn clockwise (to the right). The fingers will collapse letting the bung slide into the bung hole.*
- 3. Pull up against the fingers and push the Cam Lock down, compressing the bung. If the bung does not seal, you will need to preload the bung by releasing the Cam Lock and turn it clockwise.*
- 4. Pull up against the fingers and push down on the Cam Lock handle. If done correctly, the Rack-it-teer will act like a bulkhead fitting, stabilizing the wand and preventing it from coming out of the barrel.*

### **To remove the Rack-it-teer:**

- 1. Release the Cam Lock by pulling the handle up.*
- 2. Pull the entire Rack-it-teer up while turning clockwise. Do not be afraid to pull up against the finger locks—they are made strong enough to handle lifting up an empty barrel.*